

PiN Power™



EV FLEX-AC CHARGER **OWNER'S MANUAL**

Important Safety Instructions	4
Box Contents	6
Installation Guide	7
Pion Power Smart App Set Up.....	9
Direct Charging	10
Charging with Hotspots Control	11
Charging with Wi-Fi Connectivity	13
Troubleshooting	17
Product Specifications	19
Limited Warranty Information	23
Warranty Card	25

IMPORTANT SAFETY INSTRUCTIONS - WARNINGS

- ▲ Warning: Read this entire document and follow all warnings and instructions before installing and using the EV Flex-AC Charger. Install and use this product only within the specified operating parameters as instructed in the manual. Failure to comply can lead to property damage, injury, or death, and will void the Limited Warranty.
- ▲ Warning: Do not use the EV Flex-AC Charger if any component appears to be broken, cracked, frayed, or show any indication of damage or defect. Please contact the Pion Power Customer Service Department immediately, refer to page 12 for contact information.
- ▲ Warning: The EV Flex-AC Charger is not user-serviceable, do not attempt to open, disassemble, repair, service, or modify the product. Please contact the Pion Power Customer Service Department if assistance is needed, refer to page 12 for contact information.
- ▲ Warning: Always plug the EV Flex-AC Charger directly into the outlet with the supplied power adapter. Do not use extension cords, multi-outlet adapter, multi-plug, conversion plug or power strip to plug in the product.
- ▲ Warning: Do not use private power generators as a power source for the EV Flex-AC Charger to charge vehicles.
- ▲ Warning: Never disconnect the EV Flex-AC Charger's power adapter from the power outlet while the vehicle is still charging. Always stop the charging process, disconnect the charging handle from the vehicle, then disconnect the power adapter from the outlet.
- ▲ Warning: Always inspect the outlet before plugging the EV Flex-AC Charger in and ensure all prongs of the power adapter are fully inserted into the outlet. The power adapter may overheat and cause damage or injury if it is not inserted properly. Do not plug the product into an outlet that appears damaged, loose, or worn.
- ▲ Warning: Always connect the EV Flex-AC Charger into a power outlet that is properly grounded.
- ▲ Warning: Do not expose the EV Flex-AC Charger to any flammable, explosive, or combustible materials/vapors.
- ▲ Warning: Do not install or use the EV Flex-AC Charger near flammable, explosive, or combustible materials/vapors, or if exposed to severe rain, snow, thunderstorm, or any other inclement weather.
- ▲ Warning: If possible, avoid installing the EV Flex-AC Charger in direct sunlight.
- ▲ Warning: Handle all components of the EV Flex-AC Charger with care. Do not drop, drag, batter, twist, tangle, step on or exert strong force/impact on the EV Flex-AC Charger.
- ▲ Warning: Do not allow moisture, water, or debris to enter the openings of the EV Flex-AC Charger, especially the outlet, connector or charging handle port.
- ▲ Warning: Do not plug the EV Flex-AC Charger into an outlet if it is submerged in water or covered in snow. If the product is already plugged in, turn off the breaker before unplugging the power adapter.

IMPORTANT SAFETY INSTRUCTIONS - WARNINGS


- ▲ Warning: Do not touch the connectors of the EV Flex-AC Charger power adapter or control box with your fingers or other objects, including wire, tools, or needles. Do not fold any component of the product by force or damage it with sharp objects. Do not insert foreign objects into the product.
- ▲ Warning: Install and mount the EV Flex-AC Charger in a position so it does not hang from the power outlet. The power outlet and adapter are not designed to support the weight of the EV Flex-AC Charger.
- ▲ Warning: Hang the EV Flex-AC Charger's charging cable on the supplied hook in a location that prevents obstruction of pedestrians, pets, vehicles, or other objects. Position it in such a way to prevent damaging or stressing the components. Do not subject the charging cable to excessive forces or impact, such as closing a garage door or driving over it.
- ▲ Warning: Operation of the EV Flex-AC Charger may affect the functionality of medical or implantable electronic devices, such as implantable cardiac pacemakers or implantable cardioverter defibrillators. Prior to using the product, consult with the electronic device manufacturer regarding potential effects that charging may have on such electronic devices.
- ▲ Warning: Take care in cleaning the EV Flex-AC Charger. It is recommended to unplug the EV Flex-AC Charger from the outlet first prior to cleaning. Use a soft cloth slightly dampened with water or mild detergent to clean the surface of the EV Flex-AC Charger.
- ▲ Warning: The EV Flex-AC Charger has a built-in automatic CCID reset function.
- ▲ Warning: Do not use the EV Flex-AC Charger if the ambient temperature is outside of its operating temperature range of -22°F to 122°F (-30°C to 50°C).
- ▲ Warning: Store the EV Flex-AC Charger at a clean dry location with ambient temperature between -40°F and 185°F (-40°C and 85°C).
- ▲ Warning: The product features triple-layer overheating protection with temperature control unit in the control box and adapter.
- ▲ Warning: The product will automatically reduce the charging current if the temperature control unit reaches or exceeds 65°C. The product will automatically shut off if the temperature reaches 80°C or above. The product will automatically begin charging the vehicle again when the temperature control unit drops to 65°C or below.
- ▲ Warning: The EV Flex-AC Charger is compatible with the SAE J1772 specifications and can be used to charge battery electric and plug-in hybrid vehicles with SAE J1772 charging ports.
- ▲ Warning: Do not allow children to install or use the EV Flex-AC Charger. Children should be supervised when they are in the vicinity of the product during its operation.

BOX CONTENTS



Check the box to make sure you have all the components listed below (Picture 1).

If any parts are missing, please contact the Pion Power Customer Service Department: 416-898-5606 / support@pionpower.ca.

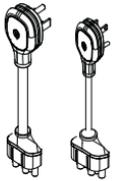

A



B



C



D



E



F



G


Inside the boxes you'll find:

- A. N5-15P adapter and N14-50P adapter
- B. Charging station/control box
- C. Wall-mount bracket
- D. User manual
- E. Charging handle holster and cable holder
- F. M4*30 countersunk head tapping screws (for "c" and "e")
- G. M6*30 plastic expansion wall plugs screw anchor (for "c" and "e")

Picture 1.

INSTALLATION GUIDE

For the recommended installation height of the Pion Power EV Flex-AC Charger please refer to Picture 2.

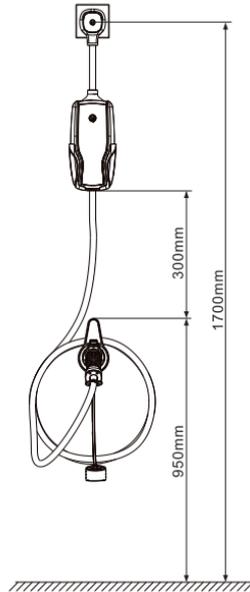


Picture 2.

INSTALLATION PROCEDURE

STEP 1

Locate the outlet you wish to wall-mount your EV Flex-AC Charger. The wall-mount bracket should be installed based on the measurements (in millimeters) shown below (Picture 3).

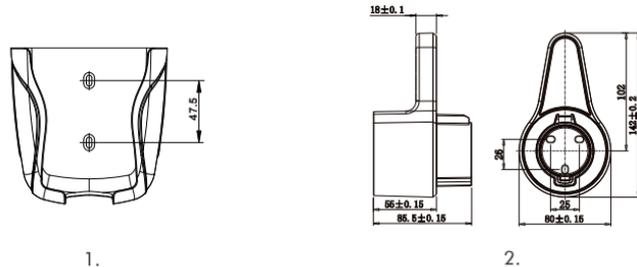

Picture 3.

1. Wall-mount bracket (**item C**) screw position
2. Charging handle holster and cable holder (**item E**) screw position

INSTALLATION GUIDE

STEP 2

Based on the measurements in Step 1, drill two pilot holes for the wall-mount bracket and two pilot holes for the cable hook.


Place the M6*30 plastic expansion wall plugs screw anchors (**item G**) over each hole and firmly tap it in until it's flush with the wall. If you do not require wall anchors, please skip this step and proceed directly to Step 3.



STEP 3

Line up the wall-mount bracket (**item C**) and screw in the two M4*30 countersunk head tapping screws (**item F**).


Line up the charging handle holster and cable holder (**item E**) and screw in the remaining two M4*30 countersunk head tapping screws (**item F**).

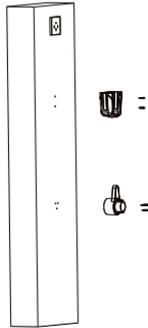

STEP 4

Depending on the outlet type (N5-15R or N14-50R), plug the corresponding adapter (**item A**) to the charging station/control box (**item B**) first. Install the charging station/control box (**item B**) on the wall-mount bracket (**item C**), and wrap the cable to your desired length on the charging handle holster and cable holder (**item E**). Plug the adapter into the wall outlet and wait for the charging station/control box (**item B**) to power on.

Note: The control box needs to be positioned so that it is directly beneath the power adapter when it is plugged in. If the outlet sticks out from the wall, an additional spacer bracket is available for purchase separately, adjustable for 1.5", 2 1/8" and 3" depth.

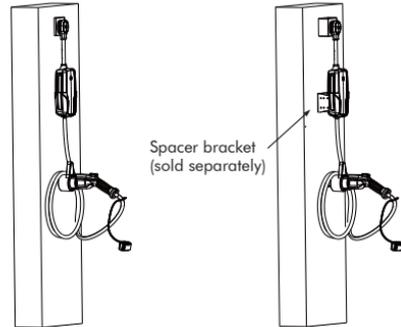

CONNECTING TO WI-FI NETWORK

Download the Pion Smart Charger App.

The Pion Smart Charger App is available to download for free on the Apple App Store and Google Play Store. The app can be found by searching for the “Pion Smart Charger” app. In addition, the app is also available for download at www.pionpower.ca.

Connecting to the Pion Power EV Flex-AC Charger

1. **Download the Pion Power Smart Charger App** from Apple App Store or Google Play Store.
2. **Connect to The EV Charger’s Hotspot.** Open your mobile phone Wi-Fi settings and connect your mobile phone to the EV Charge’s hotspot. The name is “PionPower_xxxxxx” and the password is “12345678”.
3. **Network Configuration.** Open the App and click [Ues] then click [Setting] . Enter the EV Charger network setting interface and select the home Wi-Fi option. Enter the Wi-Fi password and click [Save].
4. After the EV Charger network configuration is completed, switch your mobile network back to your home Wi-Fi or cellular data.
5. **Register User Account.** Enter the App, click [login] and click [register account]. Follow the steps to complete the registration, or log in directly with a Google account.
6. After the registration is completed, enter your newly registered account information to log in.
7. **Add The Device.** After logging in, select the “+” sign in the upper right corner of the interface. You can manually enter the SN code on the back of the control box to add the device or select to scan the SN QR code on the upper right corner of the back of the control box. After the device list is displayed, click [OK]. The device connection is now complete.

* The EV charger can be used without Wi-Fi connection. The default setting on the device is “Plug and Play” which doesn’t require any network configuration.

For more detailed instructions and other features of the Pion Smart Charger App, please visit www.pionpower.ca.

Charging Method 1: Direct Charging

STEP 1



Install the appropriate power adapter onto the charger.

STEP 2



Plug power adapter into the wall outlet.
Note: Always inspect the power adapter for damage prior to each use.

STEP 3



Insert charging handle into the vehicle and charging process starting now.

STEP 4



When vehicle is finished charging, unplug and put the charging handle into the wall-mounted holster.

Method 2: Charging with Hotspots Control



STEP 1

Install the appropriate power adapter.



STEP 2

Plug power adapter into the wall outlet.
Note: Always inspect the power adapter for damage prior to each use.



STEP 3

Find "PionPower_xxxxxx" in the Wi-Fi list of your mobile device. Connect to EV charger's hotspots with password 12345678.



STEP 4

After the hotspots is connected successfully, open Pion Smart Charger App and tap [Use]-[Charge].



STEP 5

Tap [Start] and choose the target charging current, charging time and schedule the charging start time in the same day if needed.



STEP 6

Tap [save] and [confirm] the setting to start charging or save the charging task to charge later.

Method 2: Charging with Hotspots Control



STEP 7

Insert charging handle into vehicle to start charging.



STEP 8

When vehicle is finished charging, unplug and put the charging handle into the wall-mounted holster.

Method 3: Charging with Wi-Fi Connectivity — Option 1: Start a one time charging session

STEP 1



Install the appropriate power adapter.

STEP 2



Plug power adapter into the wall outlet.
Note: Always inspect the power adapter for damage prior to each use.

STEP 3



Complete the network configuration process on page 9.

STEP 4



Insert charging handle into the vehicle and leave it on now.

STEP 5



Open and log in to the Pion Smart Charger APP.

STEP 6



Tap [Start] and choose the target charging current, charging time and schedule the charging start time in the same day if needed.

Method 3: Charging with Wi-Fi Connectivity — Option 1: Start a one time charging session



STEP 7

Tap [save] and [confirm] the setting to start charging or save the charging task to charge later.



STEP 8

When vehicle is finished charging, unplug and put the charging handle into the wall-mounted holster.

Method 3: Charging with Wi-Fi Connectivity — Option 2: Charging using Scheduler



STEP 1

Follow the same steps 1, 2, 3, 4 and 5 in the page 13.




STEP 2

Open the scheduler by tapping the clock icon at the bottom of page.



STEP 3

Tap the "+" sign in the upper right corner.

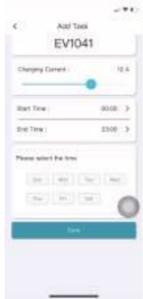

STEP 4

Adjust your charging current & charging time.



STEP 5

Select the time and date you want to charge your EV.



STEP 6

Click [Save] and the charging session will start when scheduled.

Method 3: Charging with Wi-Fi Connectivity — Option 2: Charging using Scheduler



STEP 7

When vehicle is finished charging, unplug and put the charging handle into the wall-mounted holster.

- * You can schedule up to 4 charging sessions in the same day. Please make sure there is no overlap between sessions.
- * If your home Wi-Fi goes down, the saved charging sessions will be kept in the EV charger for a week, assuming the power remains on. The memory will be cleared by resuming power sources.

LED Light	Status	Action
Red, green and blue (2 flashes)	Start-up sequence	No action required.
Green (solid)	Standby	No action required.
Green (1 flash)	Vehicle is plugged in	No action required.
Blue (1 flash)	Charging (less than 8A)	Charging, no action required.
Blue (2 flashes)	Charging (between 8A to 15A)	Charging, no action required.
Blue (3 flashes)	Charging (between 15A to 32A)	Charging, no action required.
Blue (4 flashes)	Charging (between 32A to 40A)	Charging, no action required.
Blue (solid)	Fully charged	Safely remove the charging handle from the vehicle.
Red (1 flash)	Abnormal CP signal/poor ground connection of charging handle and control board.	Please contact the Pion Power Customer Service Department.
Red (2 flashes)	Undervoltage Warning	Unplug the adapter from the outlet, and then plug it back in. If the problem persists, please contact the Pion Power Customer Service Department.

TROUBLESHOOTING

LED Light	Status	Action
Red (3 flashes)	Overvoltage Warning	Unplug the adapter from the outlet, and then plug it back in. If the problem persists, please contact the Pion Power Customer Service Department.
Red (4 flashes)	Overcurrent Warning	Unplug the charging handle from the vehicle, and then plug it back in. If the problem persists, please contact the Pion Power Customer Service Department.
Red (5 flashes)	Power Leak Warning	Unplug the charging handle from the vehicle, and then plug it back in. If the problem persists, please contact the Pion Power Customer Service Department.
Red (6 flashes)	Adapter Ground Fault Warning	Unplug the adapter from the outlet, and then plug it back in. If the problem persists, please contact the Pion Power Customer Service Department.
Red (7 flashes)	Adapter Overheat Warning	Please check if the adapter is properly plugged in the power outlet. Replace with a new power outlet if it is worn out. If the problem persists, please contact the Pion Power Customer Service Department.
Red (8 flashes)	Connector Overheat Warning	Wait for the device to cool down and it will automatically resume charging. If the problem persists, please contact the Pion Power Customer Service Department.
Red (9 flashes)	Control Box Overheat Warning	Wait for the device to cool down and it will automatically resume charging. If the problem persists, please contact the Pion Power Customer Service Department.

Need further assistance? Please contact the Pion Power Customer Service Department: 416-898-5606 / support@pionpower.ca

PRODUCT SPECIFICATIONS

Model	EFAC40NA11		EFAC32NA11	
Adapter	N5-15P	N14-50P	N5-15P	N14-50P
Input Voltage	120Vac	240Vac	120Vac	240Vac
Output Current	12A	40A	12A	32A
Max Output Power	1.4kW	9.6kW	1.4kW	7.6kW
Output Voltage	100-250 volt AC single -phase			
Input Frequency	60Hz			
Control Box Material	PC+PBT. Flame retardance UL94: 5VA			
Connector & Handle Material	PC+PBT. Copper, silver-plated			
Cable Material	Copper + TPE			
Total Length	22ft (6.6 meters) with charging handle installed			
Impact Resistance	Able to withstand 3.3ft (1 meter) freefall drop and 4,409 lb (2,000kg) vehicle crush test without critical damage			
LED Indicator	Red/green/blue			
Operating Temperature	-22°F to 122°F (-30°C to 50°C)			
Working Humidity	5%~95% without condensation			
Working Altitude	<1.24 miles (2,000 meters)			
Enclosure Type	NEMA 4			

PRODUCT SPECIFICATIONS

Model	EFAC40NA11	EFAC32NA11
Operating Environment	Indoor/Outdoor	
Cooling Method	Natural cooling	
Multiple Protection	Overvoltage protection, Undervoltage protection, Overheating protection, Overcurrent protection, Leakage protection, Grounding protection, Lightning protection, Fire and flame protection, Waterproof, Dust proof, Antistatic protection	
Safety Standard	UL 2594, UL 2231-1, UL 2231-2, CSA C22.2 No. 280, CSA-C22.2 No. 281.1, CSA-C22.2 No. 281.2	
Control Box Dimensions	9.05 x 4.45 x 2.42 inch	
Carrying Case Dimensions	15.35 x 13.78 x 5.12 inch	14.17 x 13.39 x 4.33 inch
Package Dimensions	17.72 x 16.14 x 7.28 inch	16.73 x 15.94 x 6.70 inch
Net Weight	13.9 lb (6.3 kg)	10.4 lb (4.7 kg)
Gross Weight	18.1 lb (8.2 kg)	14.3 lb (6.5 kg)
External Packing	Carton	
Charging Handle/ Connector Life Cycle	10,000 insertion/removal events (no load)	
Communication	Wi-Fi, Hotspot	
Application	Android/IOS	
Warranty	2-year limited warranty	

PRODUCT SPECIFICATIONS

Model	EFAC40NA12	EFAC32NA12
Adapter	N14-50P	N14-50P
Input Voltage	240Vac	240Vac
Output Current	40A	32A
Max Output Power	9.6kW	7.6kW
Output Voltage	100-250 volt AC single-phase	
Input Frequency	60Hz	
Control Box Material	PC+PBT. Flame retardance UL94: 5VA	
Handle	PC+PBT. Copper, silver-plated	
Cable Material	Copper + TPE	
Total Length	22ft (6.6 meters) with charging handle installed	
Impact Resistance	Able to withstand 3.3ft (1 meter) freefall drop and 4,409 lb (2,000kg) vehicle crush test without critical damage	
LED Indicator	Red/green/blue	
Operating Temperature	-22°F to 122°F (-30°C to 50°C)	
Working Humidity	5%~95% without condensation	
Working Altitude	<1.24 miles (2,000 meters)	

PRODUCT SPECIFICATIONS

Model	EFAC40NA12	EFAC32NA12
Enclosure Type	NEMA 4	
Operating Environment	Indoor/Outdoor	
Cooling Method	Natural cooling	
Multiple Protection	Overvoltage protection, Undervoltage protection, Overheating protection, Overcurrent protection, Leakage protection, Grounding protection, Lightning protection, Fire and flame protection, Waterproof, Dust proof, Antistatic protection	
Safety Standard	UL 2594, UL 2231-1, UL 2231-2, CSA C22.2 No. 280, CSA-C22.2 No. 281.1, CSA-C22.2 No. 281.2	
Control Box Dimensions	9.05 x 4.45 x 2.42 inch	
Carrying Case Dimensions	15.52 x 15.75 x 5.12 inch	17.52 x 15.75 x 5.12 inch
Package Dimensions	19.88 x 18.11 x 7.28 inch	19.88 x 18.11 x 7.28 inch
Net Weight	13.0 lb (5.9 kg)	9.7 lb (4.4 kg)
Gross Weight	18.5 lb (8.4 kg)	15.0 lb (6.8 kg)
External Packing	Carton	
Charging Handle/ Connector Life Cycle	10,000 insertion/removal events (no load)	
Communication	Wi-Fi, Hotspot	
Application	Android/IOS	
Warranty	2-year limited warranty	

Limited Warranty for Pion Power EV Flex-AC Charger

- a. Pion Power Inc. offers a limited warranty for a period of 2 years to the original purchaser at retail of the Pion Power EV Flex-AC Charger. This limited warranty is not transferrable and is only available in the U.S.A. and Canada. Pion Power (corporate name) warrants this product will conform to our published specifications in effect as of the date of shipment and be free from material defects in material and workmanship.
- b. We warrant that we shall perform all services using personnel of required skill, experience and qualifications and in a professional and workmanlike manner in accordance with generally recognized industry standards for similar services.
- c. Except for the warranty provided in section (a), we make no warranty or condition whatsoever with respect to the Pion Power EV Flex-AC Charger, including, any warranty or condition of merchantability, fitness for a particular purpose or title; whether express or implied by law, course of dealing, course of performance, usage of trade or otherwise.
- d. This limited warranty does not cover any defects or damage caused by normal wear, misuse, improper installation, external electric faults, improper service or maintenance, abuse, negligence or accident, including but not limited to:
 - Failure to follow the instructions and warnings outlined in the user manual supplied with the EV Flex-AC Charger.
 - Cosmetic damage such as scratches, chips, dents and cracks.
 - Abuse, vandalism, damage or other defects caused by accidents, misuse or negligence.
 - Disassembly or modification or repair of the EV Flex-AC Charger by an unauthorized party.
 - Damage, alteration, removal, or anything that renders the EV Flex-AC Charger's serial numbers to be illegible.
 - Damage to the EV Flex-AC Charger caused by hardware or software not supplied by Pion Power.
 - Damage from extreme power surge, electromagnetic field or any acts of nature.
 - Any other causes beyond the control of Pion Power Inc.
- e. This limited warranty is void if the product is used after you give us such notice of defect; misused; subject to careless handling; is modified in any way; or has suffered physical damage or is repaired by anyone other than the factory or its authorized representative; or the defect arises because you failed to follow our oral or written instructions as to the storage, installation, commissioning, use or maintenance of the products.
- f. If the product is found to be defective in material or workmanship during the warranty period, Pion Power will either repair or replace the product at its option, provided that any products are returned to Pion Power at the Purchaser's expense and in accordance with the Warranty Claims Procedure Policy below. At the discretion of Pion Power Inc., the repair parts and/or replacement products may either be new or reconditioned. The repair or replacement EV Flex-AC Charger will be warranted for the remainder of the original warranty period.

LIMITED WARRANTY INFORMATION

- g. Pion Power Inc. makes no warranty other than this limited warranty and expressly excludes any implied warranty including any warranty for incidental or consequential damages, including any liability under any theory of law whether contract, tort or otherwise, even if Pion Power Inc. has been informed of the possibility of such damages. All claims related to the EV Flex-AC Charger will not exceed the price you paid for the product. Your statutory rights are not affected.
- h. THIS IS YOUR SOLE AND EXCLUSIVE LIMITED WARRANTY. THE REMEDIES SET FORTH IN THIS WARRANT AND IN THE WARRANTY CLAIMS PROCEDURE POLICY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY AND OUR ENTIRE LIABILITY FOR ANY BREACH OF THIS LIMITED WARRANTY. NO ONE IS AUTHORIZED TO ALTER, MODIFY, AMEND, OR EXTEND THIS WARRANTY OR MAKE ANY OTHER WARRANTY ON BEHALF OF PION POWER. NO WARRANTIES APPLY AFTER THE WARRANTY PERIOD HAS EXPIRED. YOUR STATUTORY RIGHTS ARE NOT AFFECTED.

WARRANTY CLAIMS PROCEDURE POLICY - How to Submit a Warranty Claim

1. If you believe you have a defective EV Flex-AC Charger during the warranty term, contact Pion Power Customer Service at 416-898-5606 or to support@pionpower.ca and provide the following written information:
 - A detailed description of the defect or problem you are experiencing with the EV Flex-AC Charger.
 - The model number and serial number of the EV Flex-AC Charger.
 - Proof of original purchase.
 - Your contact information and return shipping address.
 - If warranty repair is deemed necessary, please complete and detach the Warranty Card on page 19 with all required information.
2. A Pion Power Inc. representative will troubleshoot the EV Flex-AC Charger and determine if there is a defect with the product and whether it is covered under this warranty.
3. If the defect with your EV Flex-AC Charger is determined by Pion Power Inc. to be covered by this warranty within the warranty term, please complete and detach the Warranty Card on page 19 and include the card when returning your EV Flex-AC Charger.
4. You are responsible to package the EV Flex-AC Charger and all its original components either in its original box or packaging that provide the EV Flex-AC Charger an equivalent level of protection as its original packaging and forward the unit together with proof of purchase and Warranty Card to the location which will be provided by Pion Power Customer Service. You will assume risk of any loss or damage to the EV Flex-AC Charger during shipment to Pion Power Inc.
5. If Pion Power Inc. determines the defective EV Flex-AC Charger is covered under this warranty, Pion Power Inc. will repair or replace the product and ship it back to you with a shipping carrier of our choice, at no charge to you.
6. If any EV Flex-AC Charger is determined by Pion Power Inc. to be ineligible for warranty service or falls outside the scope of this warranty, Pion Power Inc. will offer to repair or replace the product at your expense upon your approval, at Pion Power's prevailing parts and labour rates. Return shipping will also be arranged at your expense upon your approval.



WARRANTY CARD

Customer Information

Full Name: _____ Phone/Mobile Number: _____

Return Address: _____ Email: _____

Product Information

Model: _____ Purchase Date (YYYY/MM/DD): _____

Serial Number: _____

To be Completed by Repair Center:

Repair Date	Repair Center Name	Fault Description & Repair Status	Completion Date	Repair Center Stamp



